



The Garage Store Assembly Instructions

Product: Interlocking Floor Tiles

These instructions are designed to help you install our Interlocking Floor Tiles on your garage floor.



Package Contents:

- Your package will contain the requested number of tiles and ramp edges in the chosen colour.

Tools Required:

- Soft Mallet
- Measuring Tape
- Circular or Jig Saw



The Garage Store Assembly Instructions

Step 1: Start from the front of the garage and place the ramp edges in position to see what cuts are needed around the doors and for optimum spacing against the side walls.

Step 2: If your design has a pattern start from the centre and work outwards. If there is no design use the ramps to gauge the cut on either side by the walls.

PRO TIP: Allow an expansion gap of 7mm all around

Step 3: Place the first row of tiles against the ramps to get a straight line. Cut and position the ramps as required to end under the garage door.

Step 4: Work from front to back, keeping the front square and the side cuts equal. If too many are laid it is difficult to rectify any alignment because of the weight of the floor so it's best to do a few rows at a time.

Step 5: Work to the back and finish off at the wall, keeping the expansion gap of 7mm.

If you have any questions or need some advice regarding your installation, please do get in touch and we will do our best to help.

Unit 7 Westfield Farm
Medmenham
Buckinghamshire
SL7 2TA

01491 579975 | info@thegaragestore.co.uk
www.thegaragestore.co.uk



The Garage Store
01491 579975 | info@thegaragestore.co.uk
www.thegaragestore.co.uk